
Mechanical termination lug with moisture / contaminant block for medium voltage applications

# MECHANICAL CONNECTORS

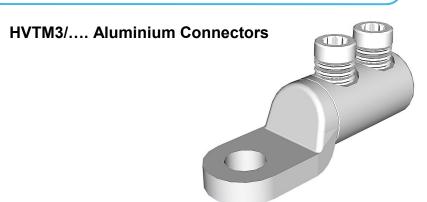

## **Principle Application:**

Termination of stranded and solid 3 & 4 cored shaped conductors.

### Range:

Connector Reference	Stranded		Solid		Stud Size
	Min	Max	Min	Max	
HVTM 3/1-12	16	120	16	95	M12
HVTM 3/1-16	16	120	16	95	M16
HVTM 3/2-12	16	185	16	150	M12
HVTM 3/2-16	16	185	16	150	M16
HVTM 3/3-12	16	300	70	240	M12
HVTM 3/3-16	16	300	70	240	M16

The 'HVTM' range of off-set palm mechanical lugs incorporate an integral moisture block and utilises the patented "universal" range taking shear bolts. The connector comes complete with core stripping guides.

Suitable for all cable voltages up to and including 11000 volts.

# **Secondary Application:**

Termination of stranded/solid circular cored conductors.

## Range:

Connector Reference					
	Stranded		Solid		Stud Size
	Min	Max	Min	Max	
HVTM 3/1-12	16	120	16	185	M12
HVTM 3/1-16	16	120	16	185	M16
HVTM 3/2-12	16	185	16	300	M12
HVTM 3/2-16	16	185	16	300	M16
HVTM 3/3-12	16	400	70	400	M12
HVTM 3/3-16	16	400	70	400	M16

Note: For jointing other core configurations/sizes please contact Sicame Technical Dept




Mechanical termination lug with moisture / contaminant block for medium voltage applications

# MECHANICAL CONNECTORS

#### **HVTM3/.... Aluminium Connectors**

# **Physical Dimensions**

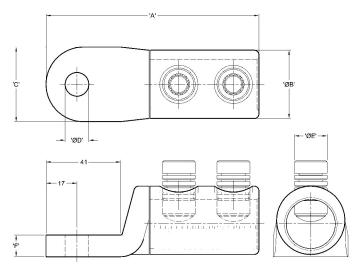

Connector	Dimensions (mm)					
Reference	'A'	øʻB'	'С'	ØʻD'	Ø'E'	
HVTM 3/1-12	104	28	41	13	M16	
HVTM 3/1-16	104	28	41	17	M16	
HVTM 3/2-12	108	32	41	13	M18	
HVTM 3/2-16	108	32	41	17	M18	
HVTM 3/3-12	117	37.5	41	13	M18	
HVTM 3/3-16	117	37.5	41	17	M18	

#### **Material:**

**Aluminium Alloy** 

## **Test Specification:**


Engineering Recommendation C79 / IEC 1238-1.

## Fitting instructions:

- 1. Strip insulation from each core equal to the depth of the bore guide + 5mm.
- 2. Thoroughly abrade exposed conductor cores. (See note).
- 3. Align the cores within the yoke.
- 4. Tighten the universal bolts consecutively one turn at a time until all the heads have sheared.

The appropriate tooling is to be used at all times, typical examples shown below.







'JTS/16' Universal Screw Socket (17mm A/F)

Note: When jointing copper conductor, wrap the supplied brass gauze around the core prior to installation.

\* Conductor cores 10mm<sup>2</sup> and below should be doubled to achieve the necessary cross sectional area.

Important: Please note that when using the HVTM terminations in joints normally rated in excess of 3.3KV, it is essential that the Jointing System Supplier's instructions for stress relieving and re-insulation techniques are strictly adhered to.